

MG6250 - Magellan 2-partition 64-zone Wireless Console with GPRS/GSM What's New V1.5

Overview

- Updated and new programming sections
- Special EN 50131 defaults
- System timers for EN 50131 compliancy
- Setting EN 50131 option defaults from the console

The following programming sections have been added to V1.5. They may not be included in any manuals, therefore use this document in conjunction with the MG6250 Console Section Programming Guide. The newest additions in the following tables are depicted with a double-lined border.

Updated and New Programming Sections

Special Alarm Report Codes

Section	Description	Data
[1658]	Zone shutdown	/
	Duress	/
	Keypad lockout	/
	Paramedical	/

Special Report Codes

Section	Description	Data
[1702]	Installer login	/
	Installer logout	/
	Delinquency	/
	Fail to arm	/

Wireless Remote Trouble/Restore Report Codes

Section	Description	Data
[1741]	Wireless remote battery trouble	/
	Wireless remote battery trouble restore	/
	Future Use	/
	Future Use	/

General Options

Section	Option	Description	OFF	ON
[2002]	1	Volume boost on entry/exit	▲ Disabled	<input type="checkbox"/> Enabled
	2	Volume boost in speaker phone mode	<input type="checkbox"/> Disabled	▲ Enabled
	3	Check-in supervision time	▲ 24 Hrs.	<input type="checkbox"/> 80 minutes
	4	RF jamming supervision	▲ Disabled	<input type="checkbox"/> Enabled
	5	Daylight savings time	▲ Disabled	<input type="checkbox"/> Enabled
	6	Trouble latch	▲ Disabled	<input type="checkbox"/> Enabled
	7	Need code to view troubles/events	▲ Disabled	<input type="checkbox"/> Enabled
	8	Bell squawk when installer in	▲ Disabled	<input type="checkbox"/> Enabled

Dialer Options

Section	Option	Description	OFF	ON
[2009]	1	Restrict arming when zone opens during exit delay*	▲ Disabled	<input type="checkbox"/> Enabled
	2	Ack trouble(s) before arming	▲ Disabled	<input type="checkbox"/> Enabled
	3	Future use	-	-
	4	Future use	-	-
	5	Future use	-	-
	6	Future use	-	-
	7	Future use	-	-
	8	Future use	-	-

* Stays open at the end of exit delay

System Timers

Section	Description	Data (value from 000 to 255)	Default Setting
[2020]	Entry delay 1	___/___/___ seconds	045 sec.
[2021]	Entry delay 2	___/___/___ seconds	045 sec.
[2022]	Intellizone delay	___/___/___ seconds (minimum 10 seconds)	045 sec.
[2023]	Recent closing delay	___/___/___ seconds	Disabled
[2024]	Auto-zone shutdown counter	___/___/___ times	005 times
[2025]	Remote lock delay	___/___/___ seconds	020 sec.
[2026]	Delinquency delay	___/___/___ days	Disabled
[2027]	Power failure report delay	___/___/___ minutes	015 min.
[2028]	Pre-alarm delay (StayD)	___/___/___ seconds	015 sec.
[2029]	Re-arm delay (StayD)	___/___/___ seconds	005 sec.
[2030]	Entry delay audio selection	___/___/___ (000 to 006*)	005
[2031]	Exit delay audio selection	___/___/___ (000 to 006*)	002
[2032]	Number of rings	___/___/___ rings	008 rings
[2033]	Answering machine override delay	___/___/___ seconds	030 sec.
[2034]	TLM fail timer	___/___/___ seconds	032 sec.
[2035]	Delay alarm transmission	___/___/___ seconds	Disabled
[2036]	Delay between dialling attempts	___/___/___ seconds (maximum 130 seconds)	020 sec.
[2037]	Lowest rate (primary communication)	___/___ (01=landline; 02 = GSM)	Disabled
[2038]	Auto-test report	___/___/___ days	Disabled
[2039]	Auto-test report time	___/___:___/___	Disabled
[2040]	GSM network failure delay	___/___/___ seconds	032 sec.
[2041]	GPRS bandwidth saver delay	___/___/___ minutes	Disabled
[2042]	EN 50131 fail to communicate timer	___/___/___ seconds	0 sec.
[2043]	Keypad lockout	___/___/___ attempts	0 attempts
[2044]	Keypad lockout duration	___/___/___ minutes	Report only
[2048]	Trouble shutdown	___/___/___ times	0
[2049]	Panic shutdown	___/___/___ times	0

* 000 = No tone; 001 = Beeping; 002 = Countdown; 003 = Tonality 1; 004 = Tonality 2; 005 = Tonality 3; 006 = Tonality 4

Special EN 50131 Defaults

General Options

Section	Option	Description	OFF	ON
[2000]	1	Access code length	<input type="checkbox"/> 6 Digits	▲ 4 Digits
	2	Audible trouble warning (except AC power failure)	▲ Disabled	<input type="checkbox"/> Enabled
	3	AC power failure warning	▲ Disabled	<input type="checkbox"/> Enabled
	4	Lock master code	▲ Disabled	<input type="checkbox"/> Enabled
	5	Console tamper supervision	<input type="checkbox"/> Disabled	▲ Enabled
	6	Code necessary to bypass zones	<input type="checkbox"/> Disabled	▲ Enabled
	7	Partition	▲ Disabled	<input type="checkbox"/> Enabled
	8	Future use	-	-

Section	Option	Description	OFF	ON
[2002]	1	Volume boost on entry/exit	▲ Disabled	<input type="checkbox"/> Enabled
	2	Volume boost in speaker phone mode	<input type="checkbox"/> Disabled	▲ Enabled
	3	Check-in supervision time	<input type="checkbox"/> 24 Hrs.	▲ 80 minutes
	4	RF jamming supervision	<input type="checkbox"/> Disabled	▲ Enabled
	5	Daylight savings time	▲ Disabled	<input type="checkbox"/> Enabled
	6	Trouble latch	<input type="checkbox"/> Disabled	▲ Enabled
	7	Need code to view troubles/events	<input type="checkbox"/> Disabled	▲ Enabled
	8	Bell squawk when installer in	<input type="checkbox"/> Disabled	▲ Enabled

Arming/Disarming Options

Section	Option	Description	OFF	ON
[2003]	1	Bell squawk when arming/disarming with remote control	▲ Disabled	<input type="checkbox"/> Enabled
	2	Stay arming switches to force stay arming	<input type="checkbox"/> Disabled	▲ Enabled
	3	Sleep arming switches to force sleep arming	<input type="checkbox"/> Disabled	▲ Enabled
	4	Full arming switches to force full arming	<input type="checkbox"/> Disabled	▲ Enabled
	5	Report system disarming	<input type="checkbox"/> Always	▲ After alarm only
	6	One-touch stay arming	▲ Disabled	<input type="checkbox"/> Enabled
	7	One-touch sleep arming	▲ Disabled	<input type="checkbox"/> Enabled
	8	One-touch full arming	▲ Disabled	<input type="checkbox"/> Enabled

Wireless Module Options

Section	Option	Description	OFF	ON	
[2004]	1	Future use	-	-	
	2	Report zone restore	<input type="checkbox"/> On bell cut-off	▲ On zone closure	
	3 & 4	Tamper recognition options (console tamper follows this option)		3	4
		Disabled		OFF	OFF
		Trouble only		OFF	ON
		Disarmed: Trouble only Armed: Follow zone's alarm type		ON	OFF
	6 & 7	Disarmed: Audible alarm Armed: Follow zone's alarm type		ON	ON
		Wireless transmitter supervision option		6	7
		Disabled		OFF	OFF
		Trouble only		OFF	ON
	6 & 7	Disarmed: Trouble only Armed: Follow zone's alarm type		ON	OFF
		Disarmed: Audible alarm Armed: Follow zone's alarm type		ON	ON
8	Generate supervision trouble if detected on bypassed zone	▲ Disabled	<input type="checkbox"/> Enabled		

Dialer Options

Section	Option	Description	OFF	ON
[2009]	1	Restrict Arming when zone opens during exit delay	<input type="checkbox"/> Disabled	▲ Enabled
	2	Ack trouble(s) before arming	<input type="checkbox"/> Disabled	▲ Enabled
	3	Future use	-	-
	4	Future use	-	-
	5	Future use	-	-
	6	Future use	-	-
	7	Future use	-	-
	8	Future use	-	-

System Timers

Section	Description	Data (value from 000 to 255)	Default Setting
[2020]	Entry delay 1	___/___/___ seconds	045 sec.
[2021]	Entry delay 2	___/___/___ seconds	045 sec.
[2022]	Intellizone delay	___/___/___ seconds (minimum 10 seconds)	045 sec.
[2023]	Recent closing delay	___/___/___ seconds	Disabled
[2024]	Auto-zone shutdown counter	___/___/___ times	005 times
[2025]	Remote lock delay	___/___/___ seconds	020 sec.
[2026]	Delinquency delay	___/___/___ days	Disabled
[2027]	Power failure report delay	___/___/___ minutes	015 min.
[2028]	Pre-alarm delay (StayD)	___/___/___ seconds	015 sec.
[2029]	Re-arm delay (StayD)	___/___/___ seconds	005 sec.
[2030]	Entry delay audio selection	___/___/___ (000 to 006*)	005
[2031]	Exit delay audio selection	___/___/___ (000 to 006*)	002
[2032]	Number of rings	___/___/___ rings	008 rings
[2033]	Answering machine override delay	___/___/___ seconds	030 sec.
[2034]	TLM fail timer	___/___/___ seconds	032 sec.
[2035]	Delay alarm transmission	___/___/___ seconds	Disabled
[2036]	Delay between dialling attempts	___/___/___ seconds (maximum 130 seconds)	020 sec.
[2037]	Lowest rate (primary communication)	___/___ (01=landline; 02 = GSM)	Disabled
[2038]	Auto-test report	___/___/___ days	Disabled
[2039]	Auto-test report time	___/___:___/___	Disabled
[2040]	GSM network failure delay	___/___/___ seconds	032 sec.
[2041]	GPRS bandwidth saver delay	___/___/___ minutes	Disabled
[2042]	EN 50131 Fail to communicate timer	___/___/___ seconds	120 sec.
[2043]	Keypad lockout	___/___/___ attempts	5 attempts
[2044]	Keypad lockout duration	___/___/___ minutes	15 minutes
[2048]	Trouble shutdown	___/___/___ times	5 times
[2049]	Panic shutdown	___/___/___ times	10 times

* 000 = No tone; 001 = Beeping; 002 = Countdown; 003 = Tonality 1; 004 = Tonality 2; 005 = Tonality 3; 006 = Tonality 4

System Timers for EN 50131 Compliancy

System timers for EN 50131 compliancy must respect the following criteria:

- [2020] - [2021] Entry delay1: maximum value is 45 seconds
- [2024] Auto-zone shutdown counter: value must be between 3 and 10 times
- [2027] Power failure report delay: maximum value is 60 minutes
- [2042] EN50131 FTC timer: maximum value is 120 seconds
- [2043] Number of invalid codes before lockout value: must be between 3 and 10
- [2044] Keypad lockout duration: minimum value is 2 minutes
- [2048] Trouble shutdown: value must be between 3 and 10 times
- [2049] Panic shutdown: value must be between 3 and 10 times
- [2111] - [2121] Bell cut-off delay: must be between 90 seconds and 15 minutes

Setting EN 50131 Option Defaults from the Console

EN 50131 option defaults can be set from the console under advanced section [9003] or the installer menu.

